

CONGRATULATIONS!

ON THE PURCHASE OF YOUR MANCO FUN KART. TO AVOID RISK OF SERIOUS INJURY OR DEATH, IT IS IMPORTANT TO FIRST READ AND UNDERSTAND THE OPERATORS MANUAL AND FOLLOW ALL INSTRUCTIONS AND WARNINGS. IF YOU DO NOT UNDERSTAND THIS, OR ANY OTHER WARNING SUPPLIED WITH YOUR KART, CONTACT YOUR DEALER OR MANCO CUSTOMER SERVICE AT 1-800-293-0795 BEFORE USING THIS KART.

BATTERY CONNECTION

This unit has been supplied with a pre-installed battery. While every effort has been made to ensure that the battery will maintain its charge, it may require additional charging by the consumer. Additionally, the negative lead has been disconnected from the battery of this unit to preserve its charge. Prior to starting, this lead must be connected to the negative (-) terminal of the battery.

DRIVE / NEUTRAL / REVERSE SHIFTING

This unit is equipped with a Drive / Neutral / Reverse transmission and should ONLY be shifted when the unit is at a COMPLETE stop. Shifting while the unit is in motion WILL cause damage to the transmission and may void the warranty on this component

INITIAL STARTING PROCEDURE

NOTE: Lost or stolen keys can be replaced by calling Manco Powersports customer service at 1-800-293-0795.

- Check the engine oil level per the Owner/Operator Manual
- Fill the fuel tank with fresh, clean mid-grade gasoline
- Ensure that the engine stop switch is in the "ON" position on both the dash and engine
- While sitting in the vehicle, apply the parking brake and shift the transmission into the "Neutral" position
- Turn the ignition key and hold for no longer than 5 seconds to prime the fuel line
- Pump the accelerator pedal 3 times, then turn the ignition key until the engine starts (hold no longer than 5 sec, and allow 15sec between starting cycles). The auto-choke will close after a 5 minute warm up period