


Chuck Wagon Front Receiver Hitch Installation

Kit Includes

- 1 Receiver hitch
- 1 Back plate
- 4 3/8" x 1" Bolts
- 4 3/8" Keps nuts



1. Place the four 3/8" x 1" bolts in the four holes in the receiver.
2. Place the back plate on the back side of the suspension mount with the bolt holes visible through the large opening in the suspension plate.
3. Place the receiver on the front suspension mount inserting the bolts through the large opening and into the holes in the back plate.

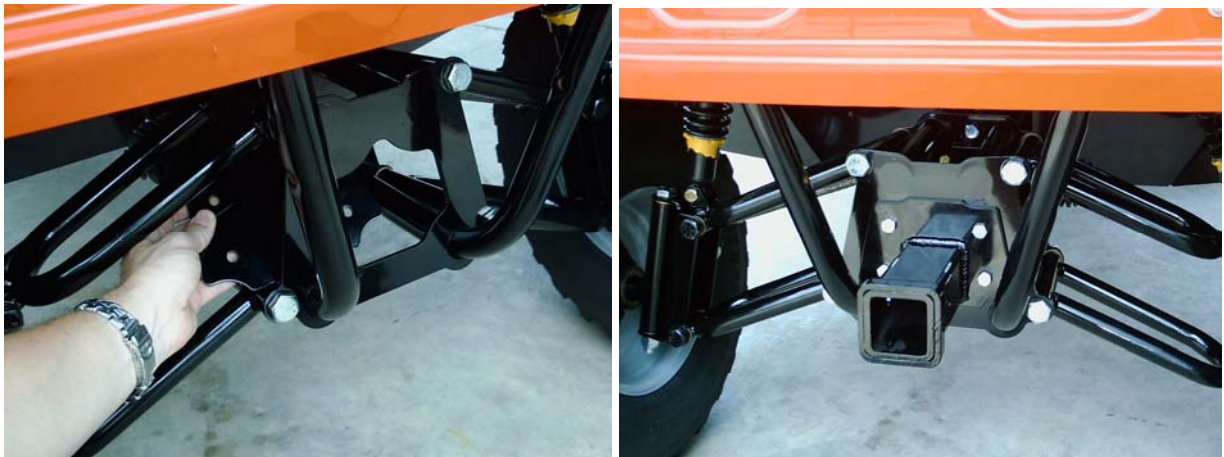

4. Install the nuts and tighten.