

Chuck Wagon Windshield Installation



<u>Parts:</u>	<u>Qty</u>
Windshield	1
Screw, 1/4" x 2 1/2"	4
Rubber grommet	4
Washer, 1/4"	8
Nut, 1/4" lock	4
Stick-on bumpers	8
POP information decal	1

Tools Needed:

Phillips Screwdriver
Wrench, 7/16"
Measuring tape

Note: Your windshield is shipped with a protective film applied. To avoid scratches, install the windshield before removing film.

1. Remove the rubber plugs from the four holes in the cage. Stick 4 bumpers on each leg of the cage in the locations shown below right.

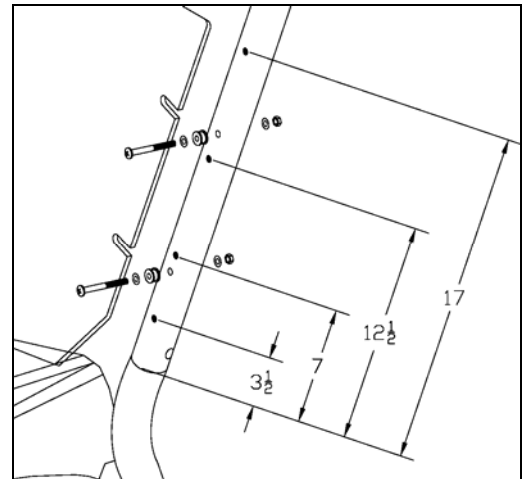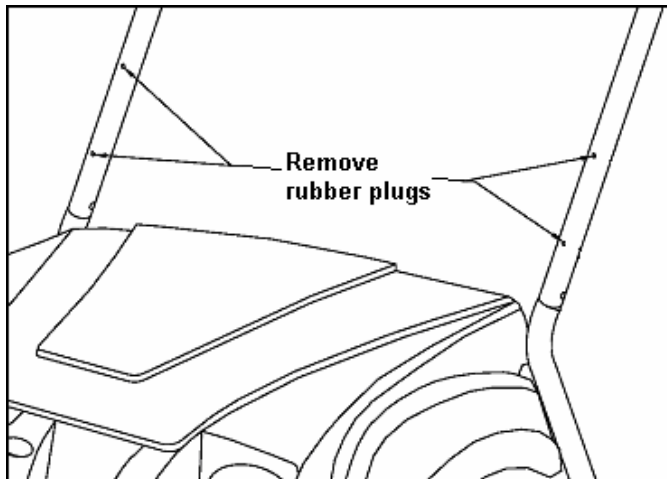

2. Slide the rubber grommets into the 4 slots in the windshield. Put a washer on each screw. Position the windshield on the vehicle and install the screws through the grommets then through the cage. Fasten the screws with a washer and lock nut. Tighten only until snug against the grommet. Overtightening will distort the grommet.
3. Remove the protective film from the windshield.

